

Releasing the webbing on #05561



You must push the red button down and move the detent bar up over and below the catch shown with the Red arrows.



When the detent bar is in this lower location you can release the webbing by pushing down the Red Button in the handle.