


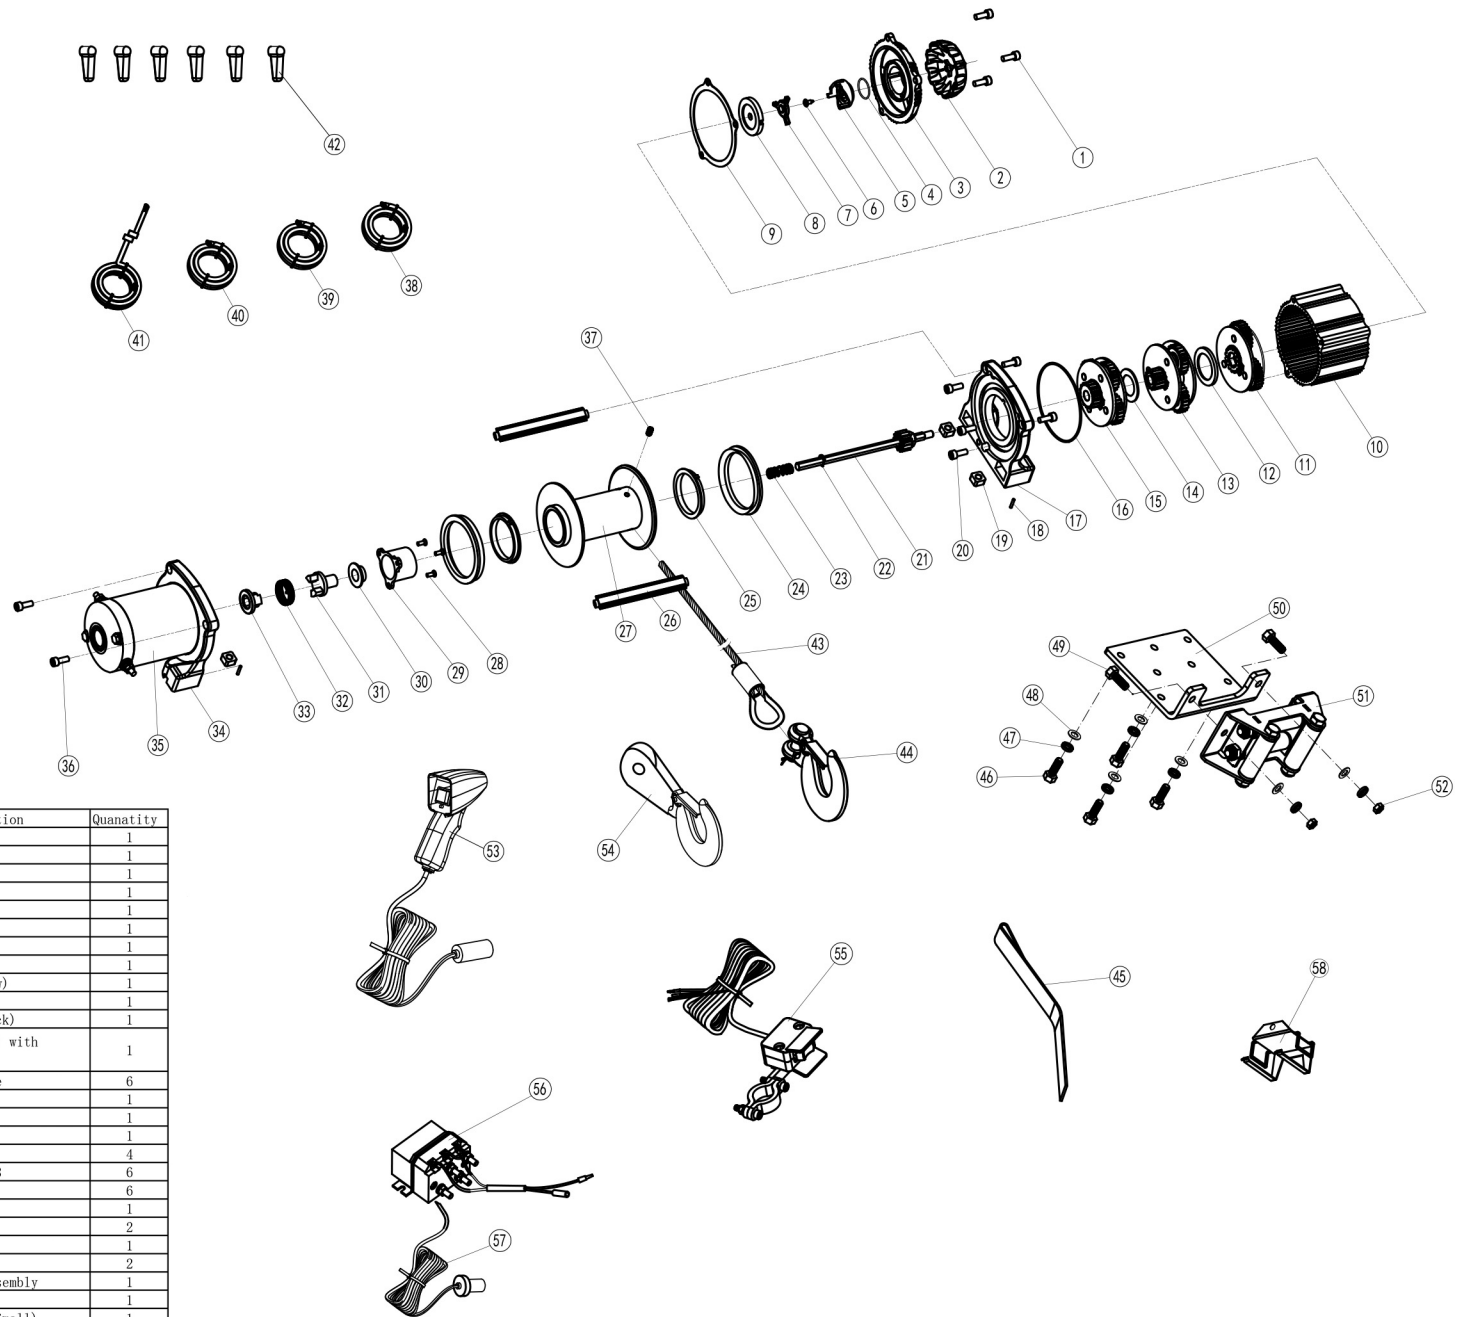

KT4000-1 part list

P/N	Description	Quantity
1	Screw M6*16	3
2	Clutch Knob	1
3	Gearbox End Cover	1
4	O-Ring $\phi 26$	1
5	Clutch knob base	1
6	Self-Tapping Screw(ST4*8)	1
7	Fork pin	1
8	Inner Supporter	1
9	Gasket Ring	1
10	Ring Gear	1
11	1st Planetary Gear Assembly	1
12	Bulkhead	1
13	2nd Planetary Gear Assembly	1
14	Bulkhead	1
15	3rd Planetary Gear Assembly	1
16	O Ring $\phi 98, 6*95*1.8$	1
17	Gearbox Cover	1
18	Elastic Pin	1
19	Nut M8	4
20	Screw M6*18	3
21	Drive Shaft	1
22	Circlip $\phi 7$	1
23	Clutch Spring	1
24	Gasket Ring	2
25	Sliding Bearing	2
26	Tie bar	2
27	Drum	1
28	Screw M4*8	3
29	Brake Housing	1

P/N	Description	Quantity
30	Locating Ring	1
31	Brake Caliper	1
32	Brake Spring	1
33	Brake Base	1
34	Motor Base	1
35	Motor Assembly	1
36	Screw M6*18	1
37	Screw M6*8	1
38	Motor Lead(Yellow)	1
39	Motor Lead(Blue)	1
40	Battery Lead(Black)	1
41	Battery Lead(Red) with Circuit Breaker	1
42	Waterproof Sleeve	6
43	Wire Rope	1
44	Hook	1
45	Hand Saver Strap	1
46	Screw M8*25	4
47	Spring Washer $\phi 8$	6
48	Flat Washer $\phi 8$	6
49	Screw M8*20	1
50	Mounting Plate	2
51	Roller Fairlead	1
52	Nut M8	2
53	Handle Switch Assembly	1
54	Pulley Hook	1
55	Switch Assembly(Small)	1
56	Solenoid	1
57	Switch Connecting Line	1
58	Switch Holder	1